



1 Gang, 2 Way 10 Amp Rocker Light Switch, for every Trendiswitch® colour plate

Connecting wires to the appropriate terminals

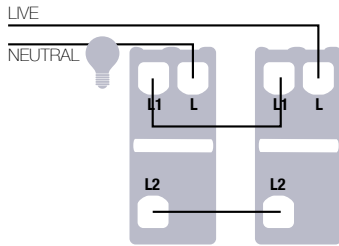



3 Gang, 2 Way 10 Amp Rocker Light Switch, for every Trendiswitch® colour plate

Connecting wires to the appropriate terminals (refer to top panel only for 1 way switches)

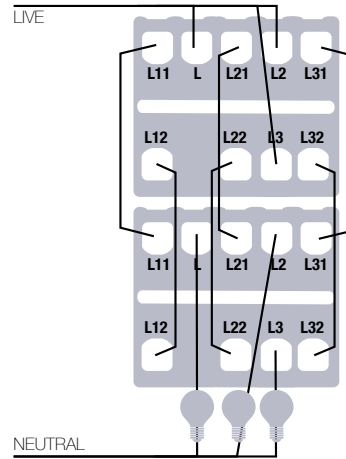


13 Amp plug sockets, for every Trendiswitch® colour plate

Connecting wires to the appropriate terminals on 1 and 2 Gang, single and double sockets

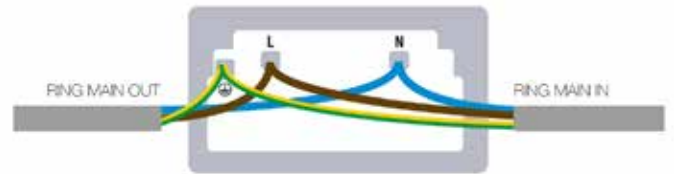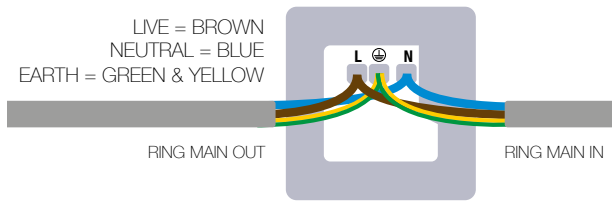


1 Gang 1 Way Dimmer switch, for every Trendiswitch® colour plate

Connecting wires to the appropriate terminals

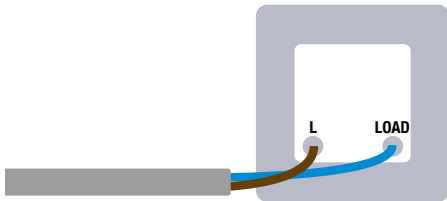


PHONE SOCKET WIRING

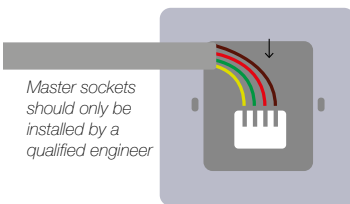

Master sockets should only be installed by a qualified engineer


For extension phone slaves, push the wires into the connectors with the same coloured cables from the master unit to the same terminal number on the slave unit

TV SOCKET WIRING

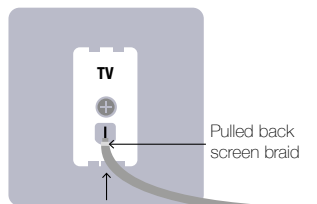

Push in & secure with screw

PC SOCKET WIRING

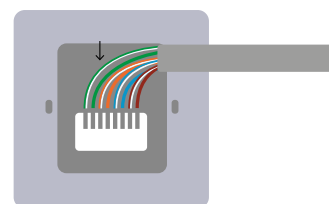

This is a 'straight through' configuration. The wires from pins 1 to 8 connect to the corresponding pins at the other end. Refer to this colour-coded diagram for sequence & push the wires into the connectors.

Not all internet connections will need the maximum 8 wires please consult a qualified installer if you are in any doubt